# DOLPHIN WALL MOUNTED DOC M WC PAN AND SEAT


INSTRUCTION MANUAL






# INSTALL DIAGRAM

#### THIS PACKAGE CONTAINS

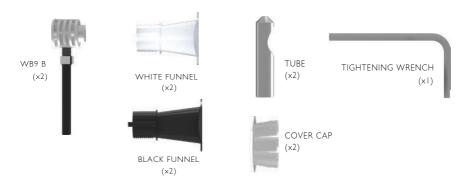


Step I

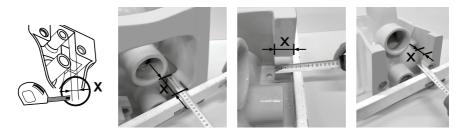

Measure the thickness of the ceramic 'X' from the support point of the WB9 B on the ceramic to the outermost point of the sanitary ware which will rest on the wall.

Step 2





Choose the correct funnels based on the thickness 'X' of the ceramic: white for X between 34 and 41 mm, black for X between 42 and 47 mm.

# INSTALL DIAGRAM

## Step 3


Check that the protrusion of the M12 threaded bars from the wall is equal to the thickness of the ceramic 'X' - 8 mm.




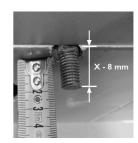

# Step 4


Screw the tube to the correct size, equal to the thickness of the ceramic 'X' - 33 mm.




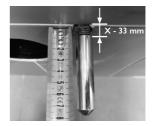

# Step 5

Orient the cavities of the sleeves laterally towards the outside. If there are no lateral holes on the sanitary fixture, orient the cavities of the sleeves










# INSTALL DIAGRAM

#### Step 6

Insert the two WB9 B fasteners onto the ceramic and attach the chosen funnels from step 2.



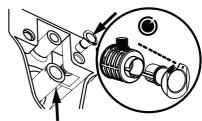


# Step 7

Rotate the WB9 B fasteners laterally until the threaded insert is accessible through the lateral hole of the sanitary fixture (A). If the sanitary fixture does not have lateral holes, rotate the WB9 B until the threaded insert is facing upwards (B).




## Step 8

Insert the sanitary fixture, ensuring that the sleeves are inside the funnels.

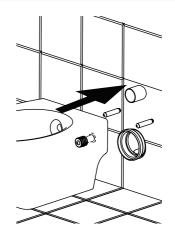

# Step 9

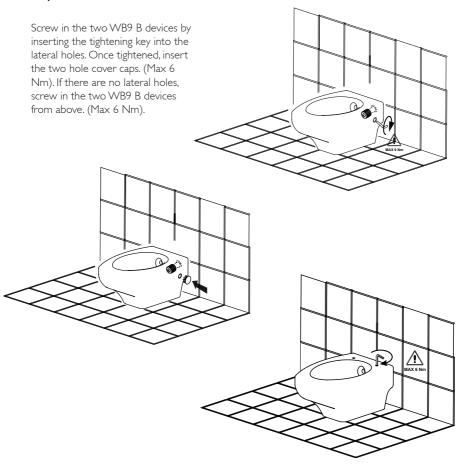



Dolphin Solutions Ltd Southpoint, Compass Park, Bodiam, Robertsbridge, TN32 5BS

Tel: +44 (0) I 424 20 22 24 Fax: +44 (0) I 424 205 200 info@dolphinsolutions.co.uk www.dolphinsolutions.co.uk